

7	191	192	193	194	195	171	172	173	174	175	176	177	178	7
6	166	167	168	169	170	146	147	148	149	150	151	152	153	6
5	141	142	143	144	145	121	122	123	124	125	126	127	128	5
4	116	117	118	119	120	96	97	98	99	100	101	102	103	4
3	91	92	93	94	95	71	72	73	74	75	76	77	78	3
2	66	67	68	69	70	46	47	48	49	50	51	52	53	2
1	41	42	43	44	45	21	22	23	24	25	26	27	28	1
př	16	17	18	19	20	196		199	197	2	3	4	5	př
strana Kaufland (sever)						Chodba			strana TESCO (jih)					

př	15	14	13	12	11			300	10	9	8	7	6	př
1	40	39	38	37	36	35	202	34	33	32	31	30	29	1
2	65	64	63	62	61	60	203	59	58	57	56	55	54	2
3	90	89	88	87	86	85	204	84	83	82	81	80	79	3
4	115	114	113	112	111	110	205	109	108	107	106	105	104	4
5	140	139	138	137	136	135	206	134	133	132	131	130	129	5
6	165	164	163	162	161	160	207	159	158	157	156	155	154	6
7	190	189	188	187	186	185	208	184	183	182	181	180	179	7